

Spare Parts List



Banner Pole



Rotary Connector (accessory sold seperately)



Flare Banner



Wave Banner


Assembly Instructions



Join each part of the banner pole




Insert the soft tube into the hole in the top of the connect pole

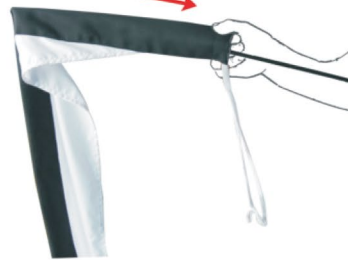

Insert the tube into the banner




Loosen the screw on the hook

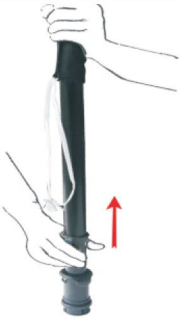

Shift up the hook



Hng the rope in the groove of the hook

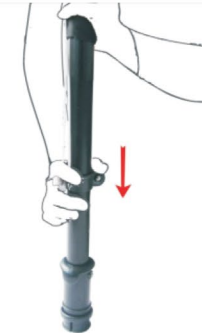


Tighten the rope



Tighten the screw on the hook



Insert the pole into the rotary connector

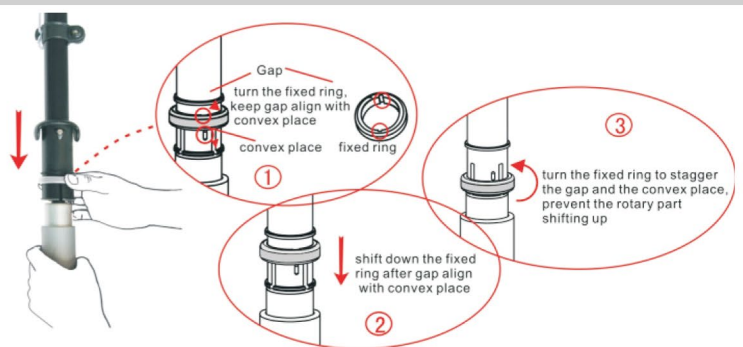

Finalis the installation as per the illustrated steps above