



# EXTREME MARQUEES

## CAR AWNING RANGE

### DESERT SHADE AWNINGS

#### INSTALLATION

## WHAT YOU WILL NEED

Before beginning installation please ensure you have two people to assist with installation and the following items; Stanley Knife, 13mm Spanner (included), Measuring Tape, Table or Flat Surface, two Step Ladders.




## PARTS LIST

The below items are included in the Desert Shade 90° package. Please ensure you have all parts before commencing installation.

a. L Bracket  
(270/180 Awning)



a. L Bracket  
(90 Awning)

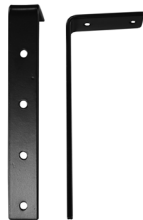

b. U Connector



c. Square Connector



d. T Bolt Set



e. Sandwich Plate



f. Tie Down Straps  
& Pins



g. M8x55  
Bolt & Nut Set



## AWNING MOUNT OPTIONS

### T-Bolt Connector



These T Bolt mounts are suited to Roof Racks and Roof Rack Platforms which have a T-slot track system.



### U Connection



These U Connection mounts can be used for mounting to Roof Racks that do not have a T-slot track system, Roof Rack Baskets and Roof Rack Platforms with round bars.



### Sandwich Plate & Square Connection



The Square Connection mount can be used for mounting to standard Roof Rack Platforms, Steel Mesh Platforms and other square or flat bar surfaces.



# INSTALLATION INSTRUCTIONS

## Preparing the Awning



### STEP 1.

Begin by laying out all of the parts and tools onto a flat surface. Ensure you have all items listed in page one. It is best to use an elevated surface such as a table or bench.

### STEP 2.

With the awning laying mount side up, thread the 4 M8x55 bolts into the awning tracks. Two on the top track and two on the bottom.

## T-bolt Bracket Installation: Option 1



### STEP 3.

Start by removing any rubber covers from the roof rack/roof rack platform tracks.



### STEP 4.


Thread two of the T-Bolts into each of the rack tracks (front & back). These only need to be threaded about 15cm in.



### STEP 5.

With all four T-Bolts in place add the L Bracket to the racks. Secure using the washer & nuts provided and 13mm spanner.

## U-Connection Installation: Option 2

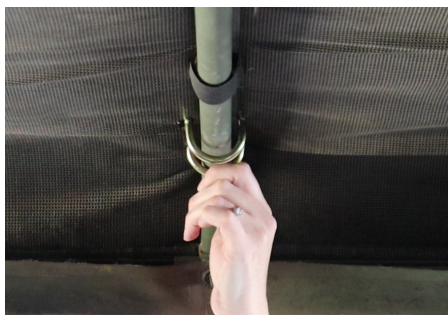

### STEP 3.

Thread each of the U-Connectors around the bar which you are wanting the awning attached to e.g. Roof Racks/ Basket/Platform



### STEP 4.

Be sure to add these to the front and back of vehicle. With each on the Connectors in place add the L Bracket onto the connectors.



### STEP 5.

Secure both brackets using the nuts and washers provided. Tighten with provided 13mm spanner.  
**\*Example above shows 270 awning bracket**

## Square Connection Installation: Option 3

### STEP 3.

Wrap each of the Square Connectors around the bar which you are wanting the awning attached to e.g. Roof Racks/ Basket/Platform

### STEP 4.

Be sure to add these to the front and back of vehicle. With each on the Connectors in place add the L Bracket onto the connectors.

### STEP 5.

Secure both brackets using the nuts and washers provided. Tighten with provided 13mm spanner.




## Mounting to Vehicle



### STEP 6.

Using a step ladder and measuring tape, measure the distance between the two L brackets mounted on the car. The distance between the brackets will vary depending on the style of connectors and vehicle used.

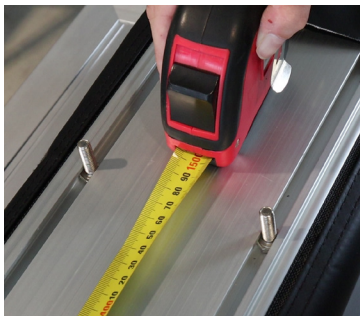

### STEP 7.

Slide the M8x55 bolts into the same distance apart as the L Brackets. This will assist with a smooth attachment for the following steps.



### STEP 8.

Using two people on step laddered bring the awning up to the L Brackets attached to the vehicles roof.



### STEP 9.

Carefully line up and thread the M8x55 bolts through the L Bracket holes.



### STEP 10.

Add the nuts and washers to each bolt and finger tighten.



### STEP 8.

Before tightening the bolts, ensure the awning is in the desired position along the car. The awning position can be adjusted by slide it along the tracks either way.



### STEP 9.

Once positioned correctly use the 13mm spanner to tighten the awning to the L Bracket. Awning is secure when it can no longer slide back and forth.



### STEP 10.

Slide the awning towards the car along the roof racks until the it is approximately 15mm from roof rack/platform.



### STEP 10.

Using the 13mm spanner tighten the 4 top bolts. Awning is secure when L Bracket does not move or slide on roof racks/platform.



## COMPLETE AWNING





## IMPORTANT INFORMATION

Extreme Marquees Awning kits come with components to securely attach to most roof racks on the market. However, Extreme Marquees does not guarantee our mounting components will be suitable for every roof rack or every application. It is the customers responsibility to assure the awning is securely mounted to their vehicle. This may mean other 3rd party connection components may need to be used. All bolts, connections & components should be checked prior to each time the vehicle is used. Any component that shows any sign of wear, damage or degradation should be immediately replaced. Any loose nuts or bolts should be immediately tightened.



call 1300 850 832

email [admin@extreme-marquees.com.au](mailto:admin@extreme-marquees.com.au)

shop [www.extreme-marquees.com.au](http://www.extreme-marquees.com.au)