

WARNING READ INSTRUCTIONS CAREFULLY BEFORE USE**ATTACHING WHEELS TO THE PROTECTIVE COVER**

Ensure area is free from any sharp objects, Stanley knife or scissors are required.




Prepare all parts ready for assembly.

REMOVE Zip Ties from Wheels, keep the bearings in position.



Insert the bolt through the wheel and bearing.

Thread the nut until finger tight to secure the wheel.

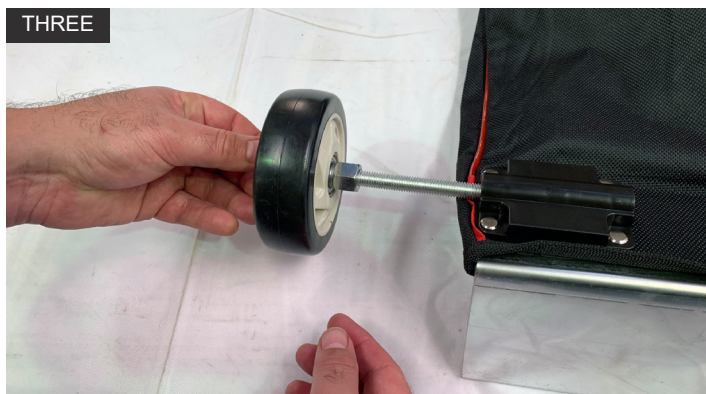

Insert the assembled wheel and bolt into the connector on the base of protective cover, thread the bolt until finger tight.



Spanner provided

Tighten the bolt on the outside of wheel until tight.



Tighten the nut on the inside of wheel until tight.

ENSURE WHEEL SPINS FREELY.



Repeat on other side.

Completed X5 Wheeled Protective Cover.